



# METAL FASTENINGS ELEMENTS

# METAL FASTENERS

CODE	OEM	MODEL	USAGE	∅ (mm)	T (mm)	H (mm)
<b>144A</b> <b>144B</b>	<b>AUDI,</b> <b>VW 8D0805121</b> <b>8D0805121B</b>	Audi, 100 C4, A4, B5, B6, B7, A6, C4, C5, C6, A8. VW Passat B5	Engine Undertray Cover Fixing Clips. <b>Suitable for this holder: 144C</b>	A) 4,2 B) 4,2	18,3 18,3	21,5 22,5
<b>144C</b>	<b>8D0805960</b>	Audi, 100 C4, A4, B5, B6, B7, A6, C4, C5, C6, A8. VW Passat B5	Engine Protection Pan Speed Nut. <b>Suitable for this holder: 144A, 144B</b>	4,5	25 - 25	9
<b>198</b>		VW, Audi. Fits many models		5	14,2	21,1
<b>283</b>	<b>AUDI N90335004,</b> <b>VW N90335004</b>	Fits many models	Metal clamp washer clips engine cover	5	30,4	3
<b>284</b>	<b>AUDI N90796502</b>	VW Golf IV / V, Lupo, New Beetle, Polo (> 2002) Scirocco (> 2009), Touran, Transporter: Audi A3, A4, A5, A6, Q5, Q7: Fits many models	Metal clamp washer clips engine cover	4,5	30	3
<b>285</b>	<b>7687944010</b>	Toyota Corolla, Prius Solara Matrix	Front Bumper - Spoiler Clip		15	9
<b>286</b>		Fits many models		3,3	13,5 - 20,5	4
<b>287</b>		Fits many models		5	16,3 - 20,3	6,1
<b>288</b>	<b>BMW 1437194187</b>	3 Series (1990-2007), 5 Series (1988-2012), 7 Series (1986-1994), 8 Series (1989-1998), X Series (1998-2012), Z Series (1997-2009)	Metal Bracket Clamps Clamp	4		
<b>289</b>	<b>SAAB 92152112,</b> <b>RENAULT</b> <b>7703080096,</b> <b>OPEL 856563</b>	Opel: Astra F, Calibra, Corsa B, Movano A, Movano B, Omega A, Omega B, Tigra A, Vectra A, Vectra, Renault: Master I, Master II. Saab: 9-3 (2002-2012), 9-5 (1995-2010), 900 (1994-1998)	Exhaust Mount Clip	16	16,3 - 20,3	9
<b>290</b>			Fits many models	4	13 - 20	4,3
<b>291</b>			Fits many models	3	11 - 16,6	4
<b>292</b>			Fits many models	5,4	14,5 - 25	4,5
<b>293</b>	<b>GM 11503714</b>	Chrysler, Ford, GM. Fits many models		6		
<b>294</b>	<b>PEUGEOT 694383,</b> <b>RENAULT</b> <b>7703046034</b>		Fits many models	6		
<b>295</b>	<b>FORD 608980</b> <b>MERCEDES-BENZ</b> <b>A0039941545</b>		Fits many models	8		
<b>296</b>		BMW: 3, 5, 7, Alpina, M3, M5, M6, X3, X5	Engine Undertray Cover Fixing Clips	4,2	18,3	22,3
<b>297</b>				6	17	24,7
<b>298</b>				6	15,4	19,2
<b>299</b>				5	18	21,8

# METAL FASTENERS

## 144A



Ø 4,2 mm ,  
T = 18,3 mm,  
H = 21,5 mm

## 144B



Ø 4,2 mm ,  
T = 18,3 mm,  
H = 22,5 mm

## 144C




Ø 4,5 mm,  
T = 25 - 25 mm,  
H = 9 mm

AVAILABLE  
COLOURS

A B C

DIMENSIONS

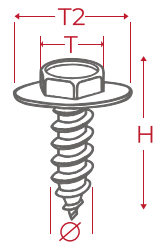

## 198



Ø 5 mm,  
T = 14,2 mm,  
H = 21,1 mm

## 283



Ø 5 mm, T = 30,4 mm,  
H = 3 mm

## 284




Ø 4,5 mm, T = 30 mm,  
H = 3 mm

## 285



T = 15 mm,  
H = 9 mm

## 286




Ø 3,3 mm,  
T = 13,5 - 20,5 mm,  
H = 4 mm

## 287




Ø 5 mm,  
T = 16,3 - 20,3 mm,  
H = 6,1 mm

## 288

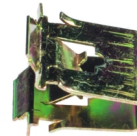

Ø 4 mm

## 289

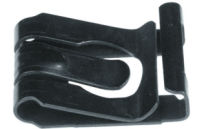

T = 16,3 - 20,3 mm,  
H = 9 mm

## 290




Ø 4 mm,  
T = 13 - 20 mm,  
H = 4,3 mm

## 291



Ø 3 mm,  
T = 11 - 16,6 mm,  
H = 4 mm

## 292



Ø 5,4 mm,  
T = 14,5 - 25 mm,  
H = 4,5 mm

## 293



Ø 6 mm

## 294



Ø 6 mm

## 295



Ø 8 mm

## 296



Ø 4,2 mm ,  
T = 18,3 mm,  
H = 22,3 mm

## 297



Ø 6 mm,  
T = 17 mm,  
H = 24,7 mm

## 298



Ø 6 mm,  
T = 15,4 mm,  
H = 19,2 mm

## 299



Ø 5 mm,  
T = 18 mm,  
H = 21,8 mm

## METAL FASTENERS

CODE	OEM	MODEL	USAGE	∅ (mm)	T (mm)	H (mm)
300				5,1	15	24,5
301				6	20	27,7
302				6	24	28,5
303				5	16,2	22
304				6	16	20,5
305				5	15	21,7
306				8	16,5	22,2
307				4,5	16	23,3
308		Toyota		5	15,8	18
309				6	20	25
310				6	15,6	20
311				6	17	39
312				5,2	18	26,3
313				6	17	30
314				5	14,5	22
315	GM 11501188			8	24	35,5
316				5	12,3	24
317				5	18	18,6

# METAL FASTENERS

**300**



Ø 5,1 mm,  
T = 15 mm,  
H = 24,5 mm

**301**



Ø 6 mm,  
T = 20 mm,  
H = 27,7 mm

**302**




Ø 6 mm,  
T = 24 mm,  
H = 28,5 mm

AVAILABLE  
COLOURS

A B C

DIMENSIONS

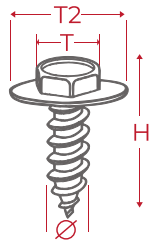

**303**



Ø 5 mm,  
T = 16,2 mm,  
H = 22 mm

**304**



Ø 6 mm,  
T = 16 mm,  
H = 20,5 mm

**305**



Ø 5 mm,  
T = 15 mm,  
H = 21,7 mm

**306**



Ø 8 mm,  
T = 16,5 mm,  
H = 22,2 mm

**307**



Ø 4,5 mm,  
T = 16 mm,  
H = 23,3 mm

**308**



Ø 5 mm,  
T = 15,8 mm,  
H = 18 mm

**309**



Ø 6 mm,  
T = 20 mm,  
H = 25 mm

**310**



Ø 6 mm,  
T = 15,6 mm,  
H = 20 mm

**311**



Ø 6 mm,  
T = 17 mm,  
H = 39 mm

**312**



Ø 5,2 mm,  
T = 18 mm,  
H = 26,3 mm

**313**



Ø 6 mm,  
T = 17 mm,  
H = 30 mm

**314**



Ø 5 mm,  
T = 14,5 mm,  
H = 22 mm

**315**



Ø 8 mm,  
T = 24 mm,  
H = 35,5 mm

**316**



Ø 5 mm,  
T = 12,3 mm,  
H = 24 mm

**317**



Ø 5 mm,  
T = 18 mm,  
H = 18,6 mm

# METAL FASTENERS


CODE	OEM	MODEL	USAGE	Ø (mm)	T (mm)	H (mm)
318				6	17	27,8
320	<b>AUDI, SEAT, SKODA, VW 4A0867276</b>	Audi A4 B6, A5, Q7 (2005-2009). VW Bora, Golf IV, V, Polo (2001-2005), Passat B6, Tiguan. Seat Ibiza (2002-2008), Leon (1999-2005), (2005-2013), Toledo (1999-2005). Skoda Octavia II, Fabia, Roomster, Superb	Boot door trim clips	6,5	9 - 18	22
321	<b>AUDI, VW 3B9867289, SEAT 4A0867276B</b>	Audi A4 B6, A5, Q7 (2005-2009). VW Bora, Golf IV, V, Polo (2001-2005), Passat B6, Tiguan. Seat Ibiza (2002-2008), Leon (1999-2005), (2005-2013), Toledo (1999-2005). Skoda Octavia II, Fabia, Roomster, Superb	Boot door trim clips	8	9 - 16	15,7
322				5	15 - 21,3	16,5
323	<b>ALFA ROMEO, FIAT, LANCIA</b>		Screw for Bumper	6	17 - 18	24,7
324		Audi, Seat, Skoda, VW, Peugeot	Screw for Bumper	6	19,3	23,5
327		Audi, mercedes benz				
328				4,9	14,3	19
329		Universal		5	15,2 - 21,1	14,5
330		Universal		3,3	14,6 - 26,3	4,3
423				3,9	11,1 - 25	4,8
424	<b>VW, AUDI 4D0611715B</b>	Audi, Volkswagen, Skoda. Fits many models	Brake Line Retaining Spring	16,1	17,2 - 28	4,5
426				8	17 - 33	14,3
427				4	22	2,5

# METAL FASTENERS

AVAILABLE COLOURS

A B C

DIMENSIONS

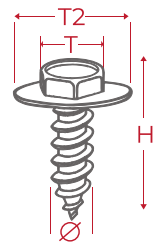


## 318



Ø 6 mm,  
T = 17 mm,  
H = 27,8 mm

## 320

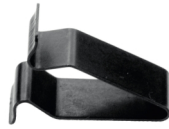


Ø 6,5 mm,  
T = 9 - 18 mm,  
H = 22 mm

## 321



Ø 8 mm,  
T = 9 - 16 mm,  
H = 15,7 mm

## 322



Ø 5 mm,  
T = 15 - 21,3 mm,  
H = 16,5 mm

## 323





Ø 6 mm,  
T = 17 - 8 mm,  
H = 24,7 mm

## 324



Ø 6 mm,  
T = 19,3 mm,  
H = 23,5 mm

## 327

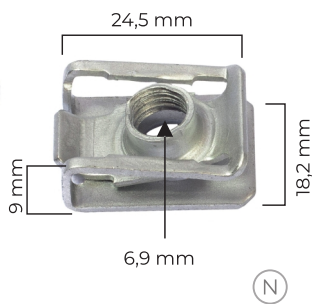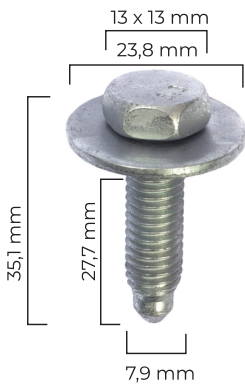


## 328



Ø 4,9 mm,  
T = 14,3 mm,  
H = 19 mm

## 329

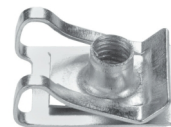

Ø 5 mm,  
T = 15,2 - 21,1 mm,  
H = 14,5 mm

## 330



Ø 3,3 mm,  
T = 14,6 - 26,3 mm,  
H = 4,3 mm

## 423



Ø 3,9 mm,  
T = 11,1 - 25 mm,  
H = 4,8 mm

## 424



Ø 16,1 mm,  
T = 17,2 - 28 mm,  
H = 4,5 mm

## 426



Ø 8 mm,  
T = 17 - 33 mm,  
H = 14,3 mm

## 427



Ø 4 mm,  
T = 22 mm,  
H = 2,5 mm

# METAL FASTENERS

CODE	OEM	MODEL	USAGE	∅ (mm)	T (mm) T2 (mm)	H (mm)
428				6	15 - 30	9,5
429				3	13,5 - 27	5,2
480		Mercedes		4,7	7,9x7,9 25,7	24,5
481		VW		4,9	11,8 20	24,5
483	<b>RENAULT</b> <b>7703017090</b>	Megane 2 Laguna 2	Screw Wheel Arch	4,7	9,1 15,2	28
484			Self Washer Coach Screw	6	10 17,5	30,5
485	<b>HYUNDAY</b> <b>92155-22000</b>			6,2	15,2	22
486				5,4	7,7x7,7 15	22
487				6,2	9,7x9,7 17,8	24,6
488				3,9	21,6 x 16,2	5,1
489				5,9	9x9 16,8	24,2
491		Toyota 7539242030	Bumper-Side Retainer	5,2	7,8x7,8 11,9	23,4
492		Toyota 9015960525	Bumper cover screw	6,4	9,8x9,8 20	23,9
494		Hyundai Kia 9215522000	Fender Liner Splash Shield Screw	6,2	15,8	22




# METAL FASTENERS

**428**



Ø 6 mm,  
T = 15 - 30 mm,  
H = 9,5 mm

**429**




Ø 3 mm,  
T = 13,5 - 27 mm,  
H = 5,2 mm

AVAILABLE  
COLOURS

A B C

DIMENSIONS

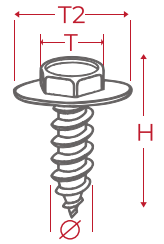

**480**



Ø 4,7 mm,  
T = 7,9 x 7,9 mm,  
T2 = 25,7 mm  
H = 24,5 mm

**481**



Ø 4,9 mm,  
T = 11,8 mm,  
T2 = 20 mm  
H = 24,5 mm

**483**



Ø 4,7 mm,  
T = 9,1 mm,  
T2 = 15,2 mm  
H = 28 mm

**484**



Ø 6 mm,  
T = 10 mm,  
T2 = 17,5 mm  
H = 30,5 mm

**485**



Ø 6,2 mm,  
T = 15,2 mm,  
H = 22 mm

**486**



Ø 5,4 mm,  
T = 7,7 x 7,7 mm,  
T2 = 15 mm  
H = 22 mm

**487**



Ø 6,2 mm,  
T = 9,7 x 9,7 mm,  
T2 = 17,8 mm  
H = 24,6 mm

**488**



Ø 3,9 mm,  
T = 21,6 x 16,2 mm,  
H = 5,1 mm

**489**



Ø 5,9 mm,  
T = 9 x 9 mm,  
T2 = 16,8 mm  
H = 24,2 mm

**491**



Ø 5,2 mm,  
T = 7,8 x 7,8  
T2 = 11,9 mm,  
H = 23,4 mm

**492**



Ø 6,4 mm,  
T = 9,8 x 9,8  
T2 = 20 mm,  
H = 23,9 mm

**494**



Ø 6,2 mm,  
T = 15,8 mm,  
H = 22 mm

(N)