

# **398**

#### OEM: FORD N804759S

Fits many models: Blind Rivet Front Bumper Cover Clip

Ø 6,1 mm, T = 16,9 mm, H = 57.6 mm

## 399




#### OEM: CHRYSLER 4370138, 6503860, FORD N804675S

Fits many models: Blind Rivet Front Bumper Cover Clip

Ø 6,4mm, T = 16,9 mm, H = 54 mm

#### **RIVETS**

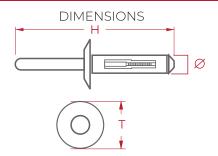

## 400



#### OEM: GM 10109689, 12337915

Fits many models: Blind Rivet Front Bumper Cover Clip

 $\emptyset$  6,4 mm, T = 18 mm, H = 54 mm

## 401



#### OEM: GM 10184895, 20452072, FORD N803862-S, CHRYSLER 6501559

Fits many models: Blind Rivet Front Bumper Cover Clip

Ø 6 mm, T = 13 mm, H = 55 mm

### 402



#### OEM: GM 20612732

Fits many models: Blind Rivet Front Bumper Cover Clip

 $\emptyset$  4,8 mm, T = 9 mm, H = 49 mm

## 403



#### OEM: GM 20423647, FORD N804189S

Fits many models: Blind Rivet Front Bumper Cover Clip

Ø 5 mm, T = 6,5 mm, H = 47,4 mm

## 404



#### OEM: CHRYSLER 6500898

Fits many models: Blind Rivet Front Bumper Cover Clip.

Ø 4,9 mm, T = 7,3 mm, H = 51,6 mm

## 405



#### OEM: CHRYSLER, JEEP, DODGE 34201631

Fits many models: Blind Rivet Front Bumper Cover Clip

Ø 6 mm, T = 17 mm, H = 55 mm

## 406



#### OEM: GM 20421672, 15955172

Fits many models: Blind Rivet Front Bumper Cover Clip

Ø 6,5 mm, T = 13 mm, H = 47 mm

## 425



Fits many models: Blind Rivet Front Bumper Cover Clip

Ø 5 mm, T = 13,8 mm, H = 21 mm